## STANDARD PRODUCTS

## **Contactor Replacement Parts**





REPLACEMENT CONTACT KITS						
MODEL NUMBER	DESCRIPTION	CONTACTOR	LIST PRICE			
→ RSC-T100	EACH KIT INCLUDES: 3 STATIONARY AND 3 MOVABLE CONTACTS (REPLACES ALL THREE PHASES OF ONE CONTACTOR)	RSC-100	CF			
RSC-T125		RSC-125	CF			
RSC-T150		RSC-150	CF			
RSC-T180		RSC-180	CF			
↑ RSC-T220		RSC-220	CF			
→ RSC-T300		RSC-300	CF			
RSC-T400		RSC-400	CF			
→ RSC-T600		RSC-600	CF			
→ RSC-T800		RSC-800	CF			



REPLACEMENT PHASE BARRIER KITS					
MODEL NUMBER	DESCRIPTION	FRAME	LIST PRICE		
A DOO DAOS		D00 100 105	٥٢		
↑ RSC-B125	EACH KIT INCLUDES: 2 PHASE BARRIERS FOR LINE OR LOAD SIDE OF ONE CONTACTOR	RSC-100~125	CF		
→ RSC-B150		RSC-150	CF		
↑ RSC-B220		RSC-180~220	CF		
── RSC-B400		RSC-300~400	CF		
↑ RSC-B800		RSC-600~800	CF		



CONTACTOR COILS					
MODEL NUMBER	COIL VOLTAGE	CONTACTOR RANGE	LIST PRICE		
→ RSC-C40-*	AC	RSC-9~40	CF		
── RSC-C22-DC-*	DC	RSC-9~22	CF		
RSC-C40-DC	DC	RSC-32~40	CF		
↑ RSC-C85-*	AC	RSC-50~85	CF		
RSC-C85-DC*	DC	RSC-50~85	CF		
↑ RSC-C150-*	UNIVERSAL	RSC-100~125~150	CF		
↑ RSC-C220-*	UNIVERSAL	RSC-180~220	CF		
↑ RSC-C400-*	UNIVERSAL	RSC-300~400	CF		
↑ RSC-C800-*	AC	RSC-600~800	CF		

<sup>\*</sup> Refer to coil voltage page 1-7 for complete part number.

<sup>\*</sup> AC and DC coils are not interchangeable.

Web stocked