
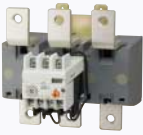


180A		220A		300A		400A		600A		800A	
											
See page 36 for more details		See page 36 for more details		See page 36 for more details		See page 36 for more details		See page 38 for more details		See page 38 for more details	
GMC-180		GMC-220		GMC-300		GMC-400		GMC-600		GMC-800	
kW	A	kW	A	kW	A	kW	A	kW	A	kW	A
230		275		350		450		660		900	
55	180	75	250	90	300	125	400	190	630	220	800
90	180	132	250	160	300	220	400	330	630	440	800
110	180	132	200	160	250	225	350	330	500	500	720
110	120	132	150	200	220	250	300	330	420	500	630
hp	A	hp	A	hp	A	hp	A	hp	A	hp	A
	230		275		350		450		660		900
15		15									
30		40									
60		60		100		125		150		250	
60		75		100		150		200		300	
125		150		200		300		400		600	
125		150		200		300		400		600	
4		4		5		5		6		7	

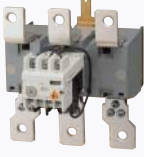

AU-100
1NO+1NC, Side mount

											
See page 46 for more details		See page 48 for more details		See page 48 for more details		See page 48 for more details		See page 48 for more details		See page 48 for more details	
GMC-180/4		GMC-220/4		GMC-300/4		GMC-400/4		GMC-600/4		GMC-800/4	
230		275		350		450		660		900	



 Setting ranges (A) 65 - 100 85 - 125 100 - 150 120 - 180 160 - 240 GT- 220		 Setting ranges (A) 85 - 125 100 - 150 120 - 180 160 - 240 220 - 300 260 - 400 GT- 400		 Setting ranges (A) 220 - 300 260 - 400 400 - 600 520 - 800 GT- 600	
GTK-220		GTK-400		GTK-600	
GTH-220/3		GTH-400/3		GTH-600/3	
GTH-220		GTH-400		GTH-600	
GTK-220/L		GTK-400/L		GTK-600/L	

3-pole Contactors / AC coil





GMC-100

GMC-125

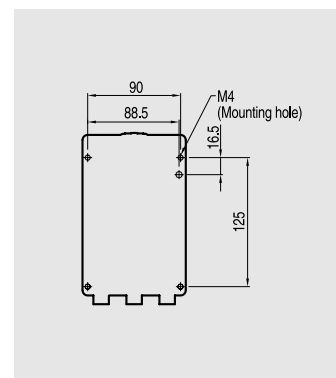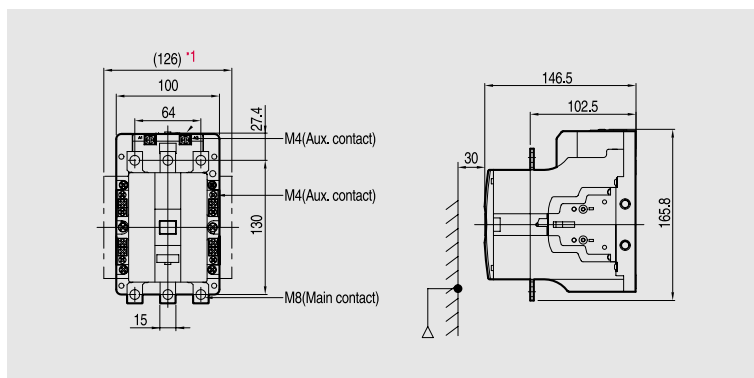

2.9kg



GMC-150

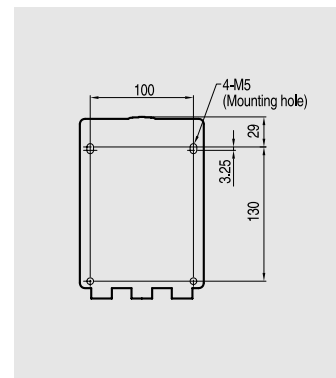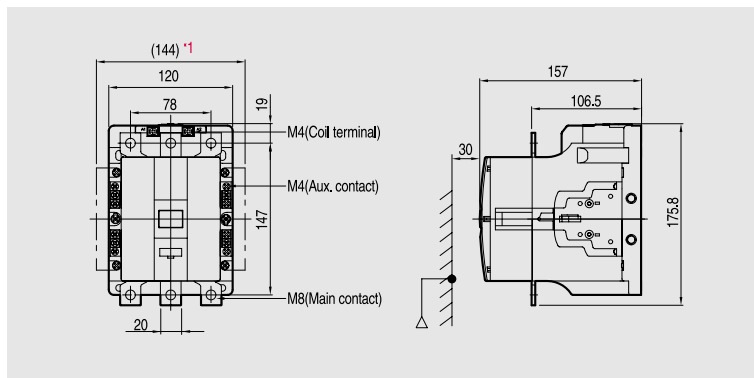

3.4kg

GMC-180


GMC-220

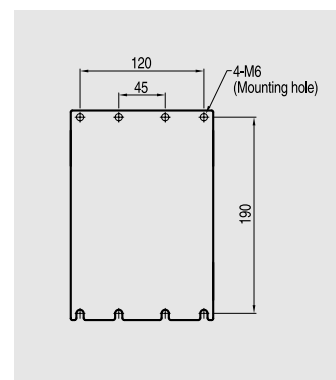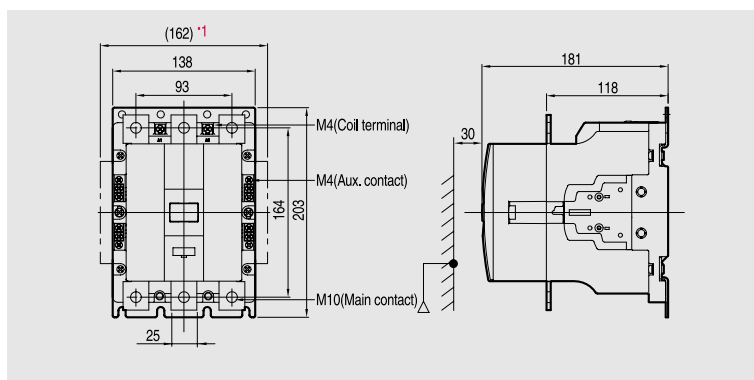

5.4kg

Circuit diagram

GMC-100~220

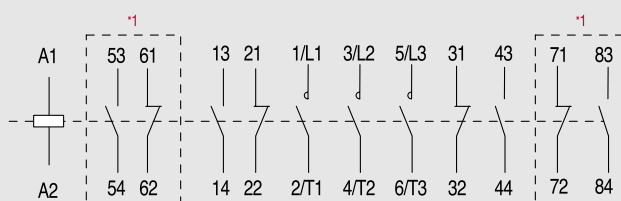

*1 : Optional auxiliary contact unit (side mount type)